


allthread
1/4-20 about
3" long. Screws
into bottom
of cross,
through the
ball and screws
into metal
insert in shaft.



1/4 inch
through hole

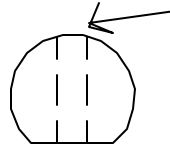


1" wooden
drawer pull

Metal insert
driven & glued
in 7/16 hole
in shaft



1" x 36"
wooden dowel
rod

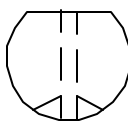

countersink

1" wooden
drawer pull
screwed onto
bottom of shaft
with flat head
screw.